**Setup Manual****Installationsanweisung****Manual de configuración****Manuel d'installation****Manuale di montaggio****Руководство по установке****Kurulum Kılavuzu**

For contents, please refer to the contents sheet.

Den Inhalt entnehmen Sie bitte der separaten Auflistung des Verpackungsinhalts.

Para conocer el contenido, consulte la hoja del contenido.

Pour en savoir plus sur le sommaire, reportez-vous à la fiche applicable.

Per il contenuto, fare riferimento al relativo foglio.

Смотрите содержание на соответствующей странице.

İçindekiler için lütfen içindekiler sayfasına bakın.



MODEL/MODELL/MODELO/MODELE/MODELLO/Модель/MODEL: M27D4

Cable information

⚠ CAUTION: Use the attached specified cables with this monitor so as not to interfere with radio and television reception.

For mini-D Sub 15-pin, please use a signal cable with ferrite core.

For HDMI and DisplayPort, please use a shielded signal cable. Use of other cables and adapters may cause interference with radio and television reception.

Informationen zu Kabeln

⚠ VORSICHT: Verwenden Sie die angebrachten bzw. angegebenen Kabel mit diesem Monitor, um Störungen des Rundfunk- bzw. Fernsehempfangs zu vermeiden. Verwenden Sie für den 15-poligen Mini-D-Sub-Anschluss ein Signalkabel mit einem Ferritkern. Verwenden Sie für HDMI und DisplayPort, abgeschirmte Signalkabel. Die Verwendung anderer Kabel und Adapter kann zu Störungen des Rundfunk- und Fernsehempfangs führen.

Información del cable

⚠ ADVERTENCIA: Utilice los cables específicos que se suministran con este monitor para no provocar interferencias en la recepción de radio y televisión.

Para mini-D Sub de 15 pinos, utilice un cable de señal con núcleo de ferrita.

En el caso de HDMI y DisplayPort, utilice un cable de señal de blindado. El uso de otros cables y adaptadores, puede causar interferencias en la recepción de radio y televisión.

Informations relatives aux câbles

⚠ ATTENTION : utilisez les câbles fournis avec ce moniteur pour éviter tout problème en matière de réception (radio et télévision). Le câble de signal mini D-Sub 15 broches doit être utilisé en association avec un noyau de ferrite.

Avec les ports HDMI et DisplayPort, employez un câble de signal blindé. L'utilisation d'autres types de câbles et adaptateurs peut provoquer des interférences avec la réception radio et télévision.

Informazioni sul cavo

⚠ ATTENZIONE: Utilizzare i cavi specifici collegati al monitor per evitare di interferire con le ricezioni radiotelevisive.

Per i connettori mini D-Sub a 15 pin, utilizzare un cavo segnale schermato. L'uso di cavi e adattatori diversi può provocare interferenze nella ricezione radiotelevisiva.

Информация о кабеле

⚠ ВНИМАНИЕ: Во избежание помех при приеме радио- и телепередач для данного монитора необходимо использовать комплектные кабели.

Для mini D-Sub 15-pin используйте кабель видеосигнала с ферритовым сердечником.

Для HDMI и DisplayPort используйте скрываютый кабель. Использование адаптеров или других кабелей может привести к возникновению помех при приеме радио- и телепрограмм.




Kablos bilgisi

⚠ UYARı: Radyo ve televizyon alımı ile interferans yaratmamak için takılı belli lenfim kabloları kullanın.

Mini D-Sub 15-pin için, lütfen ferit çekirdeklili kablo kullanın. HDMI ve DisplayPort için, lütfenblendjili sinyal kablosu kullanın. Diğer kablolarnı ve adaptörlerin kullanımını radyo ve televizyon alımı ile interferans yaratıbilir.

Optimal Performance/Optimale Leistung/Rendimiento óptimo/Performances optimales/Prestazioni ottimali/Оптимальная работа/Optimum Performans

1920 x 1080 @ 60Hz

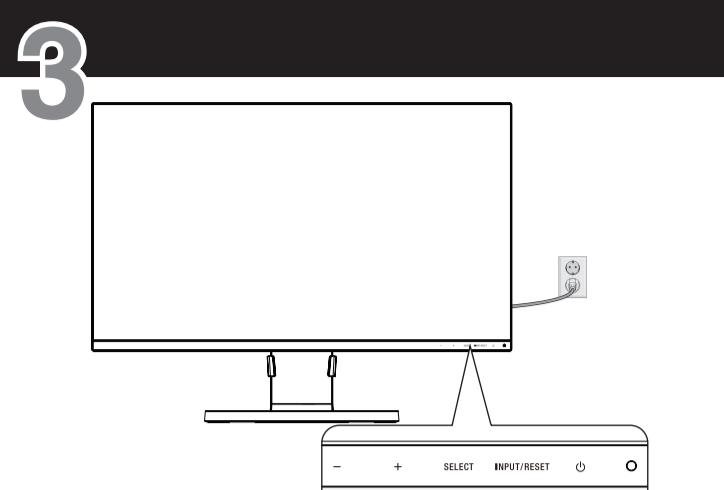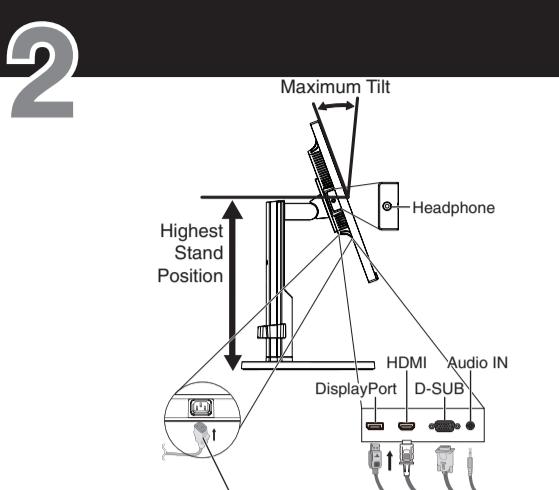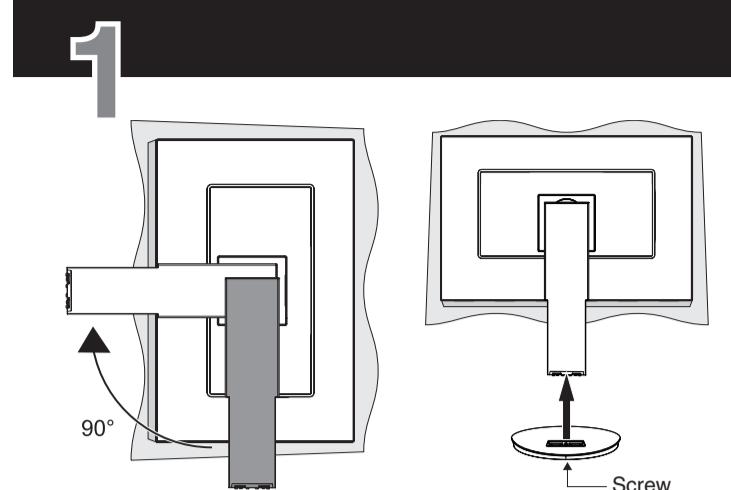

Place the monitor face down on a non-abrasive surface (so that the control keys don't touch it) and rotate the stand 90° to attach it to the back of the monitor; then attach the base to the stand, then tighten the screw at the base's bottom.

Legen Sie den Monitor mit der Oberseite nach unten auf eine glatte Oberfläche (die Bedientasten dürfen diese nicht berühren!) und schwenken Sie den Standfuß um 90 Grad. Befestigen Sie diesen anschließend an der Rückseite des Monitors, bringen Sie den Sockel am Standfuß an, und ziehen Sie die Schrauben an der Unterseite des Sockels fest.

Coloque el monitor boca abajo sobre una superficie no abrasiva (para que las teclas no la toquen) y gire el soporte 90° hasta fijarlo en la parte trasera del monitor. A continuación, fije la base al soporte y apriete el tornillo situado en la parte inferior de la base.

Placez le moniteur face vers le bas sur une surface non abrasive (de telle sorte que les boutons ne soient pas en contact avec la surface) et faites pivoter le support de 90 degrés pour le fixer à l'arrière du moniteur. Attachez ensuite le socle au support et serrez correctement les vis situées au bas du socle.

Sistemare il monitor rivolto verso il basso su una superficie non abrasiva (in modo che i tasti di controllo non la tocchino) e ruotare il supporto di 90° per fissarlo sul retro del monitor; quindi collegare la base al supporto e serrare le viti sulla fondo della base.

Поместите монитор лицевой стороной вниз на небразивную поверхность (при этом кнопки управления не должны ее касаться!) и поверните подставку на 90°, чтобы присоединить ее к задней панели монитора; затем прикрепите основание к подставке и закрутите винты на нижней части основания.

Montörün arkası düzgün bir şekilde üzerinde aşağı bakacak şekilde yerleştirin (kontrol tuşlarının temas etmemeleri için) ve ayaklı monitoru arkasına takmak için 90° döndürün; daha sonra ayaklı tabanı takın ve taban altındaki vidaları sıkıştırın.

Locate all inputs and make sure that all cords and cables are properly connected.

Schließen Sie alle Kabelverbindungen korrekt an die jeweiligen Eingänge an.

Ubique todas las entradas y asegúrese de que todos los cables están conectados correctamente.

Locaisz toutes les entrées et assurez-vous que tous les cordons et câbles sont correctement connectés.

Individuare tutti gli ingressi e assicurarsi che tutti i cavi siano collegati nel modo appropriato.

Важно! На нижней части монитора найдите кнопки, используемые для управления экранным меню.

Monitorün altinda OSD kontroller için kullanılan tuşları bulun.

Find the keys used for OSD controls at the bottom of the monitor.

Die Tasten für die OSD-Steuerungen befinden sich unten am Monitor.

Busque las teclas utilizadas para los controles OSD en la parte inferior del monitor.

Les touches utilisées pour les commandes OSD se trouvent au bas du moniteur.

Individuare i tasti utilizzati per i controlli OSD nella parte inferiore del monitor.

Важно! На нижней части монитора найдите кнопки, используемые для управления экранным меню.

WARNING
TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED. REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION
TO REDUCE THE RISK OF ELECTRIC SHOCK, MAKE SURE POWER CORD IS UNPLUGGED FROM WALL SOCKET. TO FULLY DISENGAGE THE POWER TO THE UNIT, PLEASE DISCONNECT THE POWER CORD FROM THE AC OUTLET. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol warns user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

⚠ CAUTION: Please use the power cord provided with this display in accordance with the table below. If a power cord is not supplied with this equipment, please contact NEC. For all other cases, please use the power cord with the plug style that matches the power socket where the monitor is located. The compatible power cord corresponds to the AC voltage of the power outlet and has been approved by, and complies with, the safety standards in the country of purchase. This equipment is designed to be used in the condition of the power cord connected to earth. If the power cord is not connected to the earth, it may cause electric shock. Please make sure the power cord is earthed properly.

Plug Type	North America	European Continental	U.K.	Chinese	Japanese
Plug Shape					
Region	U.S.A./Canada	EU (except U.K.)	U.K.	China	Japan
Voltage	120*	230	230	220	100

*When operating the monitor with its AC 125-240V power supply, use a power supply cord that matches the power supply voltage of the AC power outlet being used.

NOTE: This product can only be serviced in the country where it was purchased.

Safety Precautions and Maintenance

FOR OPTIMUM PERFORMANCE, PLEASE NOTE THE FOLLOWING WHEN SETTING UP AND USING THE LCD COLOR MONITOR:

• DO NOT OPEN THE MONITOR. There are no user serviceable parts inside and opening or removing covers may expose you to dangerous shock hazards or other risks. Refer all servicing to qualified service personnel.

• Do not spill liquid on the monitor or expose the monitor to liquids or water.

• Avoid dropping objects of any kind into the cabinet slots as they may touch dangerous voltage points, which can be harmful or fatal, or may cause electric shock, fire, or equipment failure.

• Do not place this product on a sloping or unstable stand, table or surface, as the monitor may fall, causing serious damage to the monitor.

• The power supply cord you use must have been approved by and comply with the safety standards of your country.

• In the UK use a BS-approved power cord with a molded plug having a black (5A) fuse installed for use with this monitor.

• Do not use the monitor outdoors.

• Do not bend, crimp or otherwise damage the power cord.

• Do not use the monitor in high temperature, humid, dusty or oily areas.

• Do not cover the vent on the monitor.

• Vibration can damage the backlight. Do not install in areas where the monitor will be exposed to continual vibration.

• If monitor or glass is broken, do not come in contact with the liquid crystal and handle with care.

• To prevent damage to the LCD monitor caused by tipping over due to earthquakes or other shocks, make sure to install the monitor in a stable location and take measures to prevent falling.

• Immediately turn off the power, unplug your monitor from the wall outlet and move to a safe location, then refer servicing to qualified service personnel under the following conditions. If the monitor is used in this condition, the monitor may cause fall, fire and electric shock:

• If the monitor stand has been cracked or peeled.

• If you notice any structural damage such as cracks or unnatural wobbling.

• If the monitor has an unusual odor.

• If the power supply cord or plug is damaged.

• If liquid or solid objects or pieces of furniture have fallen into the monitor.

• If the monitor has been exposed to rain or water.

• If the monitor has been dropped or the cabinet has been damaged.

• If the monitor does not operate normally by following operating instructions.

• Allow adequate ventilation around the monitor so that heat can properly dissipate. Do not block ventilated openings or place the monitor near a radiator or other heat sources.

• Do not put anything on top of the monitor.

• The power cable connector is the primary means of detaching the system from the power supply.

• The monitor should be installed close to a power outlet which is easily accessible.

• Handle with care during installation and adjustment to prevent personal injury and damage to the monitor.

• Do not connect headphones to the monitor while you are wearing them. Depending on the volume level, it may damage your ears and cause loss of hearing.

• Please tighten all screws. A loose screw may cause the monitor to fall off the arm or stand.

• Do not touch the LCD panel surface while transporting, mounting and setting. Applying pressure on the LCD panel can cause serious damage.

WARNING

PARA PREVENIR EL PELIGRO DE INCENDIO O DESCARGAS ELÉCTRICAS, NO EXPONGA ESTE PRODUCTO A LA LLUVIA O LA HUMEDAD.

AUDIO: La configuración predeterminada del monitor es una señal a través de la conexión DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

AUDIO: La configuración predeterminada del monitor prevé que el señaletico audio a través del conector DisplayPort.

