

Setup manual /
Manual de configuración /
Manuel d’installation

For additional information or viewing User’s manual, visit our website.
Pour obtenir des informations supplémentaires ou accéder au manuel de l'utilisateur, consultez notre site Web.
Para obtener más información o consultar el Manual del usuario, visite nuestro sitio web.



[US] <https://www.sharpnecdisplays.us/>
[Global website] https://www.sharp-nec-displays.com/dl/en/dp_manual/index.html

- Contents
- TV (1)
 - Remote control (1)
 - 1.5 V AAA batteries (2)
 - Power cord (1)
 - HDMI cable (1)
 - Setup manual (1)

Remember to save your original box and packing material to transport or ship the monitor.

- Contenido
- Televisor LCD (1)
 - Mando a distancia (1)
 - Pilas 1.5 V AAA (2)
 - Cable de alimentación (1)
 - Cable HDMI (1)
 - Manual de configuración (1)

Recuerde conservar la caja y el material de embalaje originales para poder transportar el monitor en el futuro.

- Sommaire
- Téléviseur LCD (1)
 - Télécommande (1)
 - 2 piles AAA 1,5 V
 - Cordon d'alimentation (1)
 - Câble HDMI (1)
 - Manuel d'installation (1)

N'oubliez pas de conserver la boîte et le matériel d'emballage d'origine pour le cas où vous seriez amené à transporter ou à expédier le moniteur.

- NOTE:** Do not leave the TV in the face-up or face-down position for more than one hour as this may result in a negative effect on the screen's performance.
- NOTA:** No deja el Televisor LCD boca abajo o boca arriba durante mas de una hara, ya que esto podría perjudicar el rendimiento de la pantalla.
- REMARQUE :** Ne laissez pas le Téléviseur LCD la surface vers le haul ou vers le bas pendant plus d'une heure, car cela pourrait affecter les performances de l'ecran.

HIGH-DEFINITION MULTIMEDIA INTERFACE

 
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Los términos HDMI, HDMI High-Definition Multimedia Interface (Interfaz multimedia de alta definición), HDMI Trade Dress (diseño e imagen comercial HDMI) y los logotipos HDMI son marcas comerciales o marcas registradas de HDMI Licensing Administrator, Inc.

Les termes HDMI, HDMI High-Definition Multimedia Interface, l'habillage commercial HDMI et les logos HDMI sont des marques commerciales ou des marques déposées de HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Prohibit vertical condition use /
Prohibir el uso de la condición vertical /
Interdire l'utilisation des conditions verticales

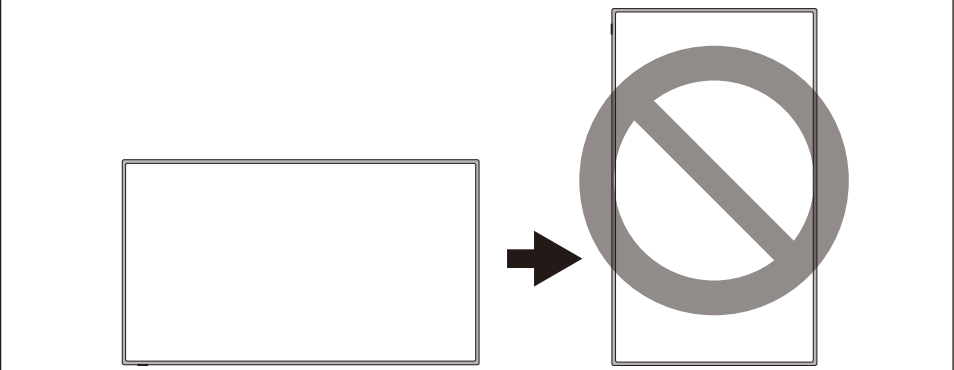

- CAUTION:** Do not rotate the TV from landscape to vertical.
- PRECAUCIÓN:** No gire la pantalla para colocarla en posición vertical.
- ATTENTION :** Ne faites pas pivoter le produit d’affichage de l’orientation paysage à l’orientation verticale.

Battery Installation and Replacement

The remote control is powered by two 1.5V AAA batteries. To install or replace batteries:

- Open the battery cover of the remote control by pushing and pulling it in the direction of the arrow.
- Insert two new “AAA” size batteries for the remote control.
When replacing old batteries, push them towards the springs and lift them out.
- Match the batteries to the (+) and (-) marks in the battery compartment.
- Insert the bottom of the battery, the (-) side, into the battery compartment first, push towards the springs and insert the top of the battery, the (+) side, into place.
Do not force the battery into the battery compartment.
- Close the battery cover making sure the tabs rest in the corresponding holes and push down the cover until it clicks shut.

Colocación y cambio de pilas

 
El mando a distancia utiliza dos pilas AAA de 1,5 V. Para colocar o cambiar las pilas:

- Abra la tapa del compartimento para las pilas del mando a distancia empujando y tirando de ella en la dirección de la flecha.
- Inserte dos pilas nuevas del tamaño “AAA” en el mando a distancia.
Al cambiar las pilas viejas, empújelas hacia los muelles y sáquelas.
- Haga coincidir los símbolos (+) y (-) de las pilas con las del compartimento.
- Inserte la parte inferior de la pila, el lado (-), en el compartimento de las pilas en primer lugar, y luego empuje hacia los resortes e inserte la parte superior de la pila, el lado (+), en su lugar.
No fuerce la pila en el compartimento.
- Cierre la tapa del compartimento asegurándose de que el resto de las pestañas estén en los orificios correspondientes y empuje la tapa hacia abajo hasta que haga clic.

Installation et remplacement des piles

La télécommande est alimentée par deux piles AAA 1,5 V. Pour installer ou remplacer les piles :

- Ouvrez le couvercle des piles de la télécommande en le poussant et le tirant dans le sens de la flèche.
- Insérez deux nouvelles piles de taille AAA dans la télécommande.
Pour remplacer des piles usagées, poussezles vers les ressorts et sortez-les.
- Respectez les polarités (+) et (-) indiquées dans le compartiment des piles.
- Insérez d’abord le bas de la pile, le côté (-), dans le compartiment, puis poussez vers les ressorts et insérez le haut de la pile, le côté (+).
Ne forcez pas pour insérer les piles dans le compartiment.
- Fermez le couvercle des piles en veillant à ce que les languettes logent dans les trous correspondants et appuyez sur le couvercle jusqu’au clic de fermeture.

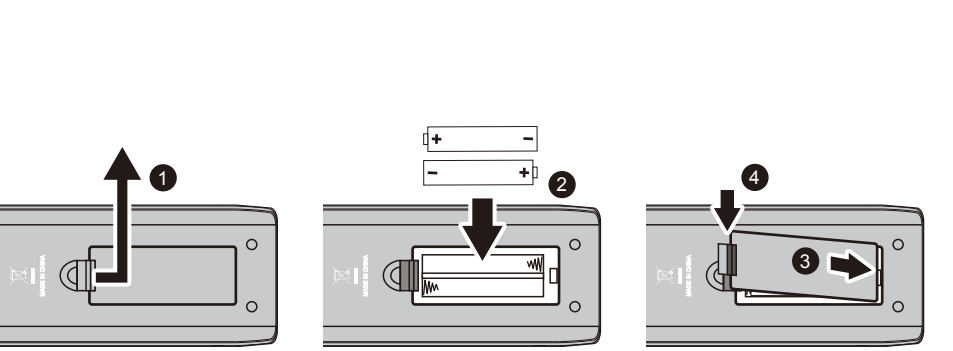

CAUTION

- Incorrect usage of batteries can result in leaks or bursting.
- Insert batteries matching the (+) and (–) signs on each battery to the (+) and (–) signs of the battery compartment.
 - Do not mix battery brands.
 - Do not combine new and old batteries. This can shorten battery life or cause liquid leakage of batteries.
 - Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
 - Do not touch exposed battery acid, it may injure your skin.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment, or a battery subject to extremely low air pressure, that can result in an explosion or the leakage of flammable liquid or gas.
 - Contact your dealer or local authorities when disposing of batteries.

NOTE: If you do not intend to use the Remote Control for a long period of time, remove the batteries.

PRECAUCIÓN

- El uso incorrecto de las pilas puede provocar fugas o roturas en las mismas.
- Coloque las pilas de manera que la indicación de los polos (+) y (–) de cada pila corresponda a la indicación (+) y (–) del compartimento.
 - No mezcle distintas marcas de pila.
 - No mezcle pilas nuevas y viejas. Si lo hace, puede acortar la duración de la pila o hacer que se produzcan fugas de líquidos en ella.
 - Retire inmediatamente las pilas agotadas para evitar que el ácido de las mismas se derrame en el compartimento.
 - Si cae ácido, no lo toque, ya que puede dañarle la piel.
 - Quemar las pilas o depositarlas en un horno caliente, o bien cortarlas o aplastarlas mecánicamente, puede originar una explosión.
 - Dejar las pilas en un entorno sujeto a altas temperaturas, o con una presión de aire extremadamente baja, puede originar una explosión o la fuga de liquido inflamable o gas.
 - Póngase en contacto con su distribuidor o con las autoridades locales cuando se disponga a desechar las pilas.

NOTA: Si no va a utilizar el mando a distancia durante un periodo de tiempo prolongado, retire las pilas.

 
ATTENTION

- Une mauvaise utilisation des piles peut provoquer des fuites ou un éclatement.
- Insérez les piles en faisant correspondre les signes (+) et (–) sur chaque pile avec ceux gravés à l’intérieur du boîtier.
 - Ne mélangez pas des piles de marques différentes.
 - Ne mélangez pas des piles neuves avec des piles anciennes. Cela peut entraîner une fuite des piles ou diminuer leur durée de vie.
 - Enlevez les piles déchargées pour éviter une fuite de l'acide des piles dans le boîtier.
 - Ne touchez pas le liquide s’écoulant d’une pile endommagée, car cette substance est nocive pour la peau.
 - Jeter des piles au feu, dans un four chaud ou dans une presse mécanique, ou leur découpage, peut entraîner une explosion.
 - Il en va de même des environnements à très haute température ou dont la pression est très faible.
 - Contactez votre vendeur ou les autorités locales pour en savoir plus sur le traitement des batteries.

REMARQUE : retirez les piles si vous prévoyez de ne pas utiliser la télécommande pendant une longue période.

Connect external equipment / Conecte el equipo externo / Connexion de matériel externe

To protect the external equipment, turn off the main power before making connections.
Para proteger el equipo externo, apague el interruptor principal antes de realizar las conexiones.
Pour protéger le matériel externe, mettez-le hors tension avant d’effectuer des branchements.

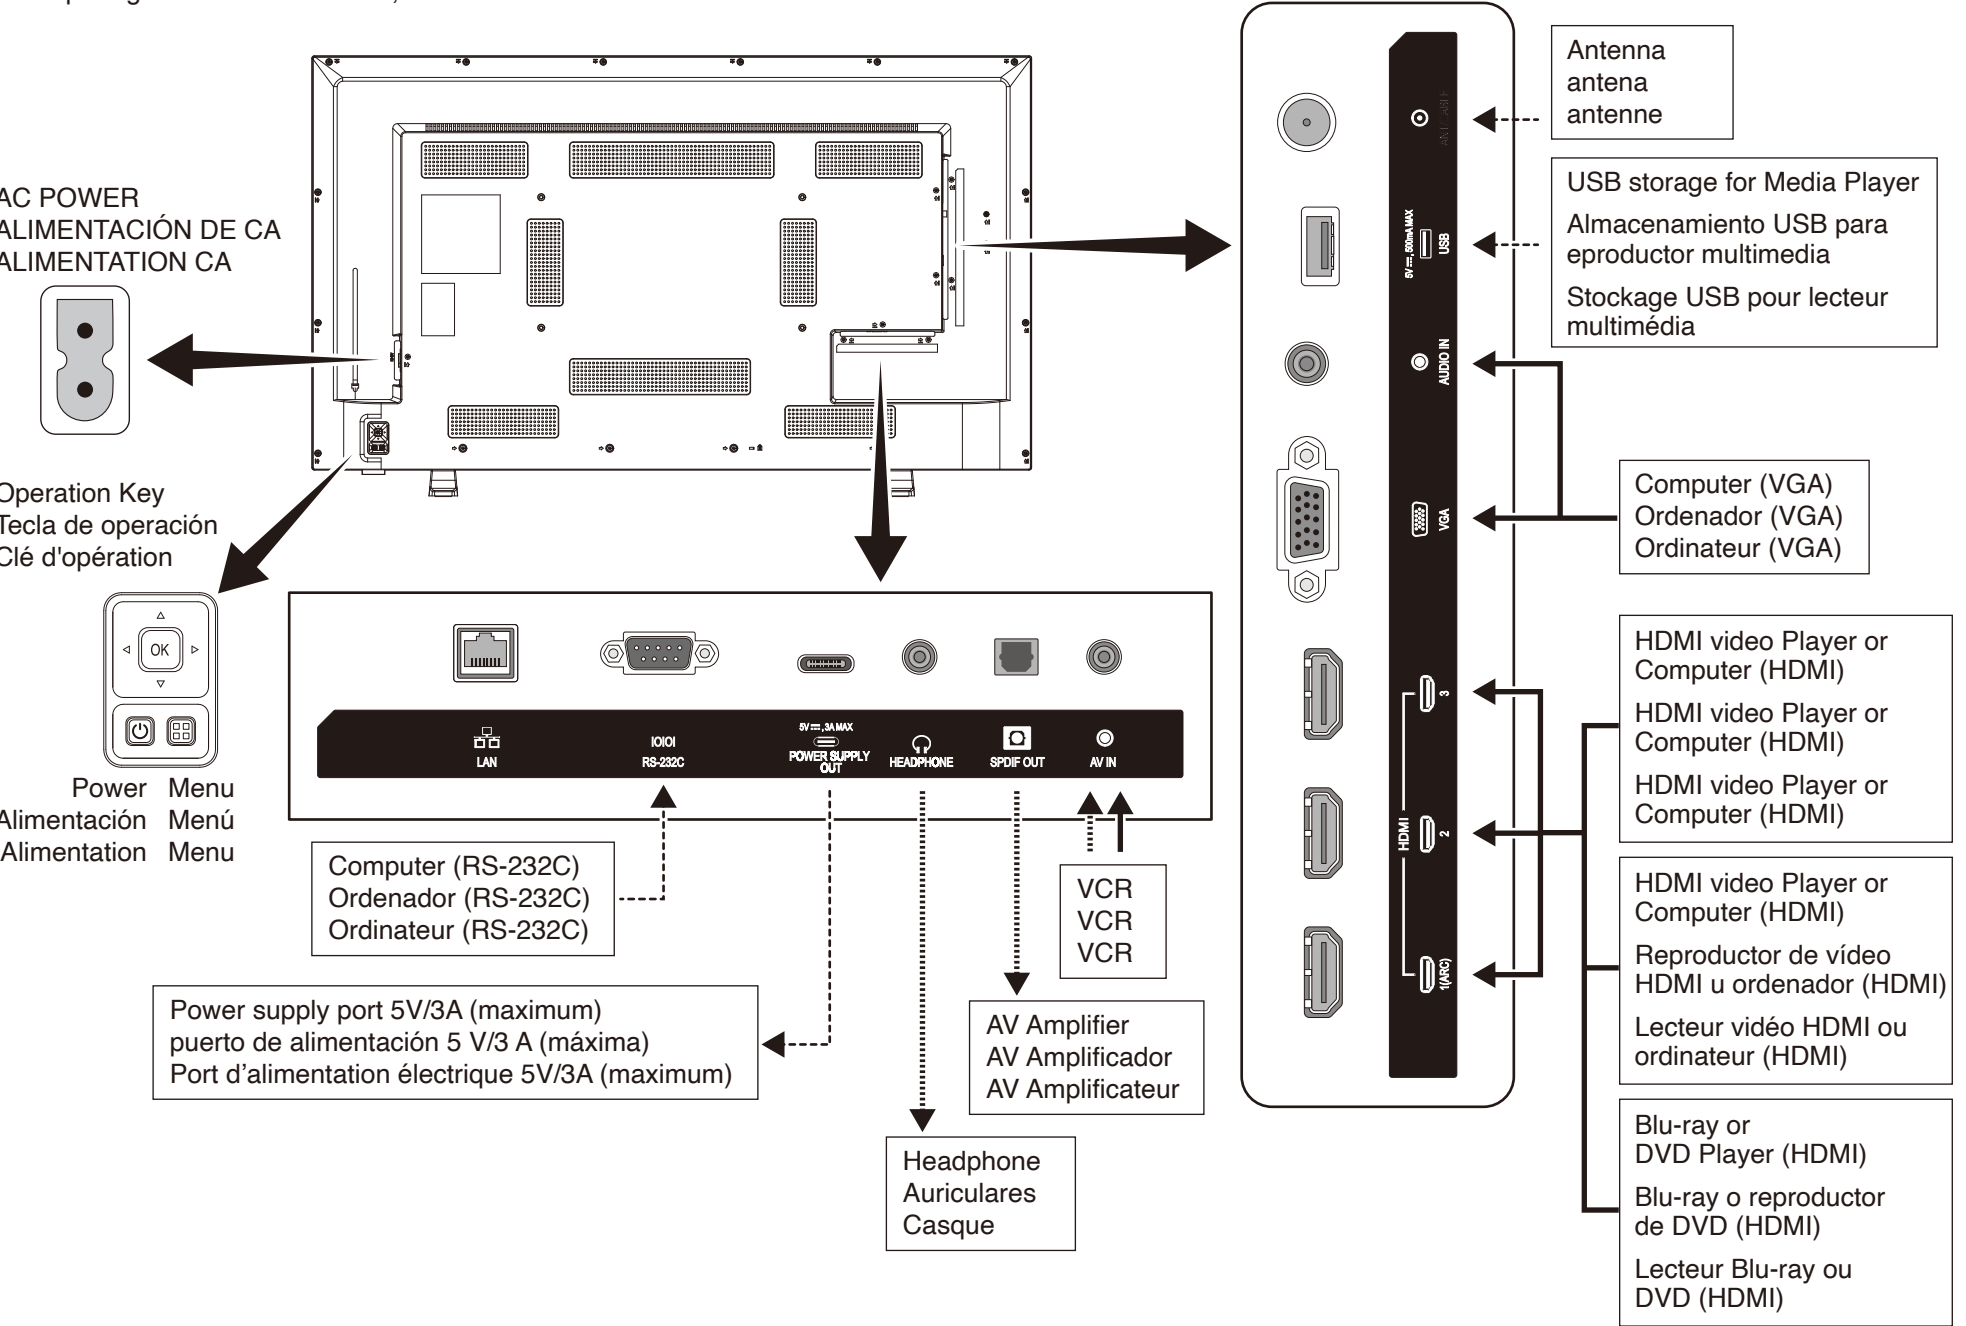

- Connecting to a TV
- Cable distribution system should be grounded (earthed) in accordance with ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable.
 - The screen of the coaxial cable is intended to be connected to earth in the building installation.

- Conexión a un televisor
- El sistema de distribución de cable debe tener una conexión a tierra adecuada según lo establecido en ANSI/NFPA 70, National Electrical Code (NEC), específicamente en la sección 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable.
 - La malla del cable coaxial se debe conectar a la toma de tierra de la instalación del edificio.

- Connexion à une Téléviseur
- Le système de distribution des câbles doit être mis à la terre en accord avec la norme ANSI/NFPA 70, NEC (National Electrical Code), en particulier la Section 820.93, « Grounding of Outer Conductive Shield of a Coaxial Cable » (Mise à la terre du blindage conducteur externe d’un câble coaxial).
 - L’écran du câble coaxial est destiné à être connecté à la terre dans l’installation du bâtiment.

----- Dotted lines = other signal ——— Solid lines = video signal Dashed lines = audio signal
Líneas con puntos = otra señal Líneas continuas = señal de vídeo Líneas con guiones = señal de audio
Lignes pointillées = autre signal Lignes continues = signal vidéo Lignes en tirets = signal audio

FCC Information

- CAUTION:**
- To assure continued compliance and prevent possible undesirable interference, ferrite cores may be used when connecting this LCD TV to video equipment; and maintain at least 400mm spacing to other peripheral device.
- Use the provided specified cables with this product so as not to interfere with radio and television reception.
- (1) Please use the supplied power cord.
- (2) Please use the supplied shielded HDMI signal cable.
- (3) For AV, please use a shielded signal cable.
- (4) For mini D-Sub 15-pin and USB, please use a shielded signal cable with ferrite core.
- (5) For D-sub 9-pin and Coaxial, please use a shielded signal cable.
- (6) Connections to this device must be made with shielded cables with metallic RF / EMI connector hoods to maintain compliance with FCC Rules and Regulations.

- WARNING:**
- The Federal Communications Commission does not allow any modifications or changes to the unit EXCEPT those specified by Sharp NEC Display Solutions of America, Inc. in this manual. Failure to comply with this government regulation could void your right to operate this equipment.

Información de la FCC

- PRECAUCIÓN:**
- Para asegurar la conformidad continua y prevenir la posible interferencia no deseada, se pueden usar núcleos de ferrita al conectar este televisor LCD a un equipo de video; y mantenga un espacio al menos 400mm con otros dispositivos periféricos.
- Utilice los cables específicos que se suministran con este producto para no provocar interferencias en la recepción de radio y televisión.
- (1) Utilice el cable de alimentación suministrado.
- (2) Utilice el cable blindado de señal HDMI suministrado.
- (3) Para AV, utilice un cable blindado de señal.
- (4) Para mini D-Sub de 15 patillas y USB, utilice un cable blindado de señal con núcleo de ferrita.
- (5) Para D-Sub de 9 patillas y coaxial, utilice un cable blindado de señal.
- (6) Las conexiones a este dispositivo deben realizarse con cables blindados con cubierta metálica RF / EMI para capuchas de conector para cumplir con la Normativa de la FCC.

- ADVERTENCIA:**
- La Comisión Federal de Comunicaciones no permite realizar modificaciones ni cambios a la unidad EXCEPTO los especificados por Sharp NEC Display Solutions of America, Inc. en este manual. El incumplimiento de esta ley gubernamental puede anular su derecho a utilizar este equipo.

Informations de la FCC

- ATTENTION :**
- Afin de garantir la conformité continue et de prévenir les possibles interférences indésirables, vous pouvez utiliser des tores magnétiques lorsque vous connectez ce téléviseur LCD à un équipement vidéo. Maintenez également une distance d'au moins 400 mm avec les autres périphériques.
- Utilisez les câbles fournis avec ce produit pour éviter tout problème en matière de réception (radio et télévision).
- (1) Veuillez utiliser le câble d'alimentation fourni.
- (2) Veuillez utiliser le câble de signal HDMI blindé fourni.
- (3) Veuillez utiliser des câbles blindés pour les signaux audiovisuels.
- (4) Pour mini D-Sub à 15 broches et USB, veuillez utiliser un câble de signal blindé avec un tore magnétique.
- (5) Pour mini D-Sub à 9 broches et coaxial, veuillez utiliser un câble de signal blindé.
- (6) Les raccordements à cet appareil doivent être effectués avec des câbles blindés munis de boîtiers de connecteur métalliques RF/EMI afin de se conformer aux règles et aux réglementations de la FCC.

- AVERTISSEMENT :**
- La FCC américaine (Federal Communications Commission, ou « Commission fédérale des communications ») interdit d'apporter des modifications à l'unité, SAUF celles indiquées dans ce manuel par Sharp NEC Display Solutions of America, Inc. Le non-respect de cette réglementation peut annuler votre droit d'utiliser cet équipement.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If necessary, the user should contact the dealer or an experienced radio/television technician for additional suggestions.

The user may find the following booklet, prepared by the Federal Communications Commission, helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C., 20402, Stock No. 004-000-00345-4.

SUPPLIER'S DECLARATION OF CONFORMITY

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. Responsible Party: Sharp NEC Display Solutions of America, Inc.
Address: 3250 Lacey Rd, Ste 500
Downers Grove, IL 60515
(630) 467-3000

Type of Product: LCD TV
Equipment Classification: Class B Peripheral
Model: E328-2



Installation for using the Stand Base (optional)

 
IMPORTANT: Do not apply pressure to the TV screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

Instalación para el uso de la base del soporte (opcional)

IMPORTANTE: no aplique presión en el área de visualización de la pantalla del televisor, ya que puede comprometer la integridad de la pantalla. La garantía del fabricante no cubre instalaciones inadecuadas o usos inadecuados por parte del usuario.

Installation pour l'utilisation de la base du stand (facultatif)

IMPORTANT : N'appliquez pas de pression sur une zone de l'écran du téléviseur afin de ne pas remettre en cause l'intégrité de l'écran. La garantie du fabricant ne couvre pas les utilisations abusives par l'utilisateur ou les installations incorrectes.

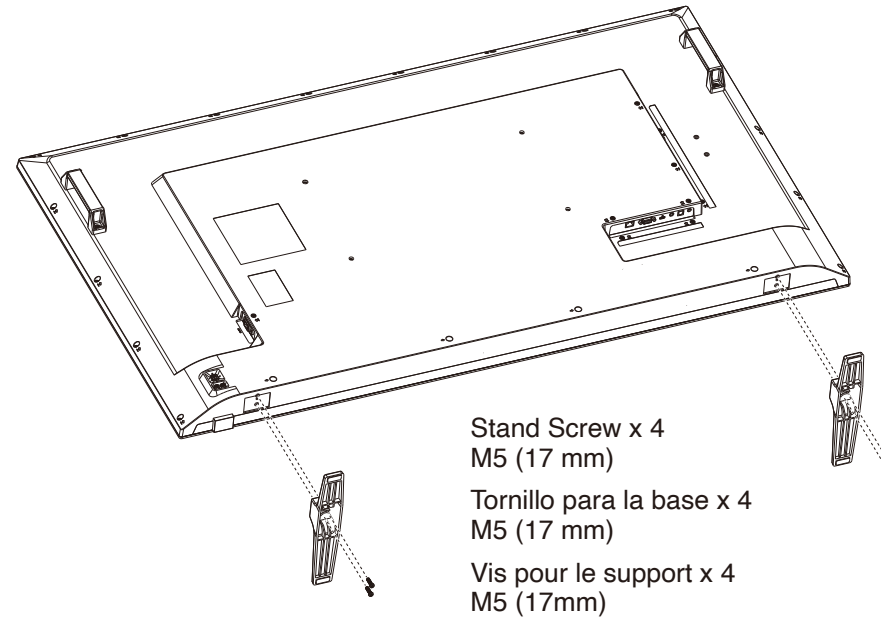

1. Place the TV face down on a soft and flat surface to prevent scratching and damage.
 2. Carefully align the stand base to the button of the display and fasten the screws with a cross-head screwdriver.
- CAUTION:** The stand base is very heavy. Install with care to avoid injury such as dropping the stand base onto one's foot.

1. Coloque el televisor boca abajo sobre una superficie suave y plana para evitar arañazos y daños.
 2. Alinee con cuidado la base con el botón de la pantalla y apriete los tornillos con un destornillador de estrella.tornillos M5.
- PRECAUCIÓN:** La base del soporte es muy pesada. Instálolo con cuidado para evitar lesiones como dejar caer la base del soporte sobre el pie.

1. Placez le téléviseur avec l'écran tourné vers le bas, sur une surface douce et plane afin d'éviter les rayures et autres dommages.
 2. Alignez soigneusement la base de support sur le bouton de l'écran et attachez les vis avec un tournevis cruciforme.
- ATTENTION :** La base de stand est très lourde. Installez-la avec soin pour éviter qu'elle ne vous tombe sur le pied et vous blesse.

Important Information

Safety Precautions and Maintenance
FOR OPTIMUM PERFORMANCE, PLEASE NOTE THE FOLLOWING WHEN SETTING UP AND USING THE LCD TV:

About the Symbols

To ensure safe and proper use of the product, this manual uses a number of symbols to prevent injury to you and others as well as damage to property. The symbols and their meanings are described below. Be sure to understand them thoroughly before reading this manual.

	WARNING	Failing to heed this symbol and handling the product incorrectly could result in accidents leading to major injury or death.
	CAUTION	Failing to heed this symbol and handling the product incorrectly could result in personal injury or damage to surrounding property.

About the Symbols

	This symbol indicates a warning or caution.
	This symbol indicates a prohibited action.
	This symbol indicates a mandatory action.

WARNING	
	Unplug the power cord if the product malfunctions. Should the product emit smoke or strange odors or sounds, or if the product has been dropped or the cabinet broken, turn off the product's power, then unplug the power cord from the power outlet. Contact your dealer for repairs. Never try to repair the product on your own. Doing so is dangerous.
	Do not open or remove the product's cabinet. Do not disassemble the product. There are high voltage areas in the product. Opening or removing product covers and modifying the product may expose you to electric shock, fire, or other risks. Refer all servicing to qualified service personnel.
	Do not use the product if it has structural damage. If you notice any structural damage such as cracks or unnatural wobbling, please refer servicing to qualified service personnel. If the product is used in this condition, the product may fall or cause personal injury.
Handling the power cord.	
	Do not scratch or modify the cord. • Do not place heavy objects on the cord. • Do not let the weight of the product rest on the cord. • Do not cover the cord with a rug, etc. • Do not bend, twist or pull the cord with excessive force. • Do not apply heat to the cord. Handle the power cord with care. Damaging the cord could lead to fire or electric shock. If the cord gets damaged (exposed core wires, broken wires, etc.), turn off the product's power, then unplug the power cord from the power outlet. Ask your dealer to replace it.
	Do not touch the power plug if you hear thunder. Doing so could result in electric shock.
	Do not connect or disconnect the power cord with wet hands. It may cause an electric shock.

	REQUIRED	Please use the power cord provided with this product in accordance with the power cord table. Do not exceed the product's specified power supply voltage where it is installed. Doing so could result in a fire or electric shock. Please refer to the power supply voltage information in the specification. If a power cord is not supplied with this product, please contact us. For all other cases, please use the power cord with the plug style that matches the power socket where the product is located. The compatible power cord corresponds to the AC voltage of the power outlet and has been approved by, and complies with, the safety standards in the country of purchase.
	REQUIRED	For proper installation it is strongly recommended to use a trained service person. Failure to follow the standard installation procedures could result in damage to the product or injury to the user or installer.
	REQUIRED	Please install the product in accordance with the following information. This product cannot be used or installed without the table top stand or other mounting accessory for support. When transporting, moving, or installing the product, please use as many people (two or more people) as necessary to be able to lift the product without causing personal injury or damage to the product. Please refer to the instructions included with the optional mounting equipment for detailed information about attaching or removing. Do not cover the vent on the product. Improper installation of the product may result in damage to the product, an electric shock or fire. Do not install the product in the locations below: • Poorly ventilated spaces. • Near a radiator, other heat sources, or in direct sunshine. • Continual vibration areas. • Humid, dusty, steamy, or oily areas. • An environment where there are corrosive gases (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc.). • Outdoors. • High-temperature environment where humidity changes rapidly and condensation is likely to occur. • A ceiling or wall that is not strong enough to support the product and mounting accessories. Do not mount the product upside down.
	REQUIRED	Prevent tipping and falling for earthquakes or other shocks. To prevent personal injury or damage to the product caused by tipping over due to earthquakes or other shocks, make sure to install the product in a stable location and take measures to prevent falling. The measures to prevent falling and tipping are intended for reducing the risk of injury, but may not guarantee the effectiveness against all earthquakes. The product may tip causing personal injury. • When using the product with the optional table top stand, fasten the product to a wall using a cord or chain that can support the weight of the product in order to prevent the product from falling. Depending on the table top stand, the stand has the structure for preventing tipping. Please refer to the table top stand manual. • Be sure to remove the cord or chain from the wall before moving the product to prevent personal injury or damage to the product. The product may fall causing personal injury. • Do not attempt to hang the product using an installation safety wire. • Please install the product in an area on the wall or ceiling strong enough to support the weight of the product. • Prepare the product using mounting accessories, such as hook, eyebolt, or mounting parts, and then secure the product with a safety wire. The safety wire must not be tight. • Please make sure the mounting accessories are strong enough to support the product weight and size before installing it. Stability Hazard. The product may fall, causing serious personal injury or death. To prevent injury, this product must be securely attached to the floor/wall in accordance with the installation instructions. Many injuries, particularly to children, can be avoided by taking simple precautions such as: • ALWAYS use stands or installation methods recommended by the manufacturer of the product set. • ALWAYS use furniture that can safely support the product. • ALWAYS ensure the product is not overhanging the edge of the supporting furniture. • ALWAYS educate children about the dangers of climbing on furniture to reach the product or its controls. • ALWAYS route cords and cables connected to your product so they cannot be tripped over, pulled or grabbed. • NEVER place a product in an unstable location. • NEVER place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support. • NEVER place the product on cloth or other materials that may be located between the product and supporting furniture. • NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the product or furniture on which the product is placed. If the existing product is going to be retained and relocated, the same considerations as above should be applied.
	PROHIBITED	Do not place this product on a sloping or unstable cart, stand or table. Doing so could lead to falling or tipping and cause personal injury.
	PROHIBITED	Do not insert objects of any kind into the cabinet slots. It may cause electric shock, fire, or product failure. Keep objects away from children and babies. If objects get into the cabinet slot, turn off the product's power, then unplug the power cord from the power outlet. Contact your dealer for repairs.
	DO NOT WET	Do not spill any liquids into the cabinet or use your product near water. Immediately turn off the power and unplug your product from the wall outlet, then refer servicing to qualified service personnel. It may cause an electric shock or start a fire. Do not install the product under equipment that discharges water, such as air conditioners.
	PROHIBITED	Do not use flammable gas sprays to remove dust when cleaning the product. Doing so could lead to a fire.
	PROHIBITED	Usage of the product must not be accompanied by fatal risks or dangers that, could lead directly to death, personal injury, severe physical damage or other loss, including nuclear reaction control in nuclear facility, medical life support system, and missile launch control in a weapon system.

	WARNING	
TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED. REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

 CAUTION	
Handling the power cord.	
 REQUIRED	The monitor should be installed close to an easily accessible power outlet.
 REQUIRED	When connecting the power cord to the product's AC IN terminal, make sure the connector is fully and firmly inserted. An incomplete connection of the power cord may cause overheating of the plug; it allows dust to get on the plug connection, which can lead to a fire. Touching the pins of a partially inserted plug may lead to an electric shock. Fasten the power cord to the product by attaching the clamp to prevent loose connection. (Recommended Fasten Force: 120 - 190 N · cm).
 REQUIRED	Handling the power cord by following below to avoid fire or electric shock. • When connecting or disconnecting the power cord, pull the power cord out by holding onto its plug. • Unplug the power cord from the power outlet before cleaning the product or when not planning to use the product for an extended time. • When the power cord or plug is heat or damaged, unplug the power cord from the power outlet, and contact a qualified service person.

