

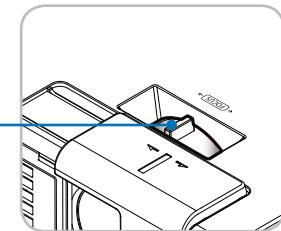
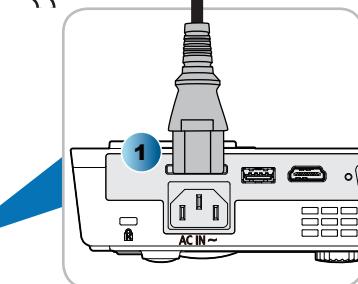
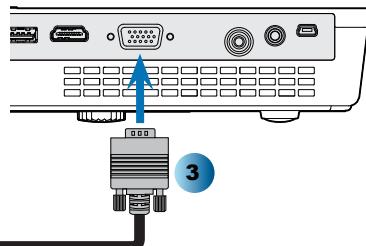


2 To the wall outlet

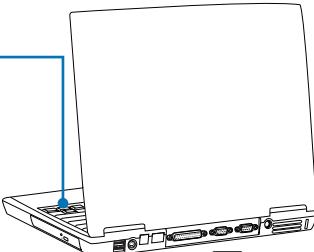

6 On/Off

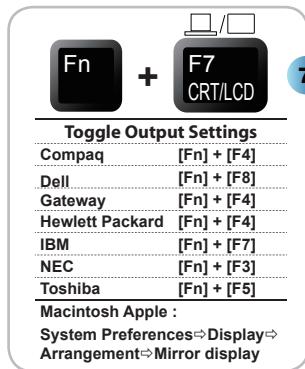

Adjust Focus  
Régler la mise au point  
Stellen Sie den Fokus ein  
Ajuste el enfoque  
Regolare la messa a fuoco  
Ajuste da focagem  
Justera fokus  
Настройте фокусировку  
调整焦距  
초점 조절  
Wyreguluj Ostrość  
Élességállítás  
Προσαρμογή Εστίασης  
Odağı Ayarla  
Pas de scherpstelling aan  
Juster Fokus  
Projektorin tarkennuksen säättö  
Juster fokus  
Upavit zaostření  
ضبط البؤرة

7N8N2201

© NEC Display Solutions, Ltd. 2011

Ver 1 08/11

Printed in China



P/N 36.8LN02G001-A