
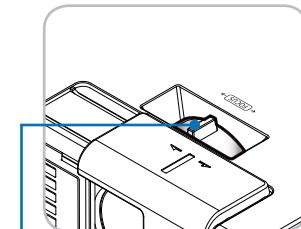


2 To the wall outlet

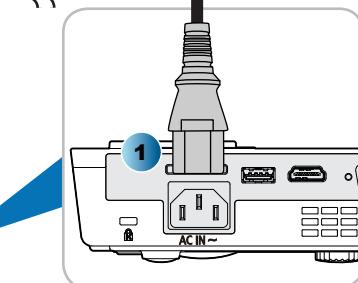

8

Adjust Focus

Régler la mise au point

Stellen Sie den Fokus ein

Ajuste el enfoque

Regolare la messa a fuoco

Ajuste da focagem

Justera fokus

Настройте фокусировку

调整焦距

초점 조절

Wyreguluj Ostrość

Élességállítás

Προσαρμογή Εστίασης

Odağı Ayarla

Pas de scherpstelling aan

Juster Fokus



Projektorin tarkennuksen säättö

Juster fokus


Upavit zaostření

ضبط البيرة

6 On/Off

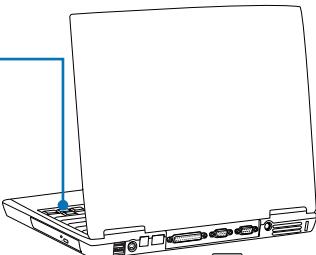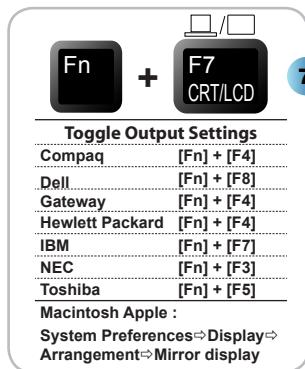

4

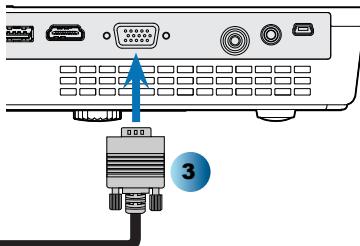

3

7N8N3031

© NEC Display Solutions, Ltd. 2012

Ver 1/05/12

Printed in China



P/N 36.8RN02G001-A