

型号

NEC


NP-M403W+/NP-M363W+/NP-M323W+/NP-M403X+/
NP-M363X+/NP-M323X+/NP-M283X+/NP-M353WS+/
NP-M303WS+/NP-M333XS+/NP-M403H+/NP-M323H+/
NP-M353HS+/NP-M323HS+/NP-M303HS+

快速设置指南

保留备用


步骤 1

将电脑与投影机相连。

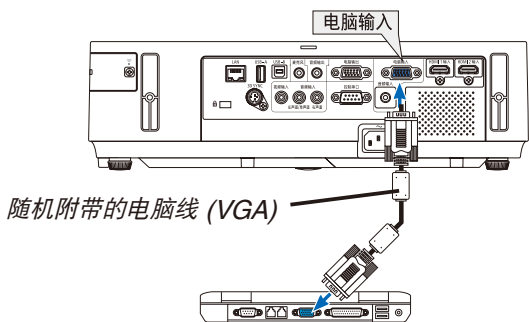


步骤 2

连接随机附带的电源线。

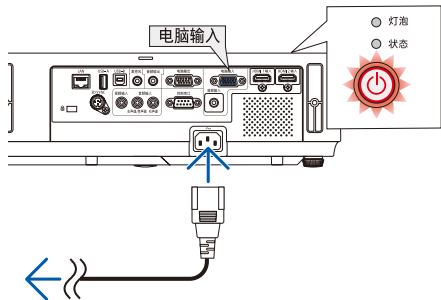


步骤 3

[M403X+/M363X+/M323X+/M283X+/M403W+/
M363W+/M323W+/M403H+/M323H+]
将镜头盖滑至右边使镜头打开。

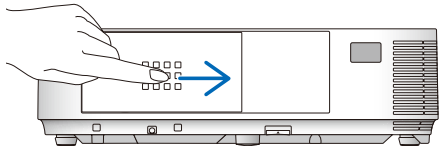


[M353WS+/M303WS+/M333XS+/
M353HS+/M323HS+/M303HS+]
摘下镜头盖。

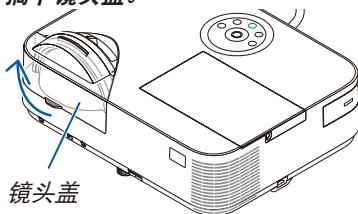



步骤 4

开启投影机。

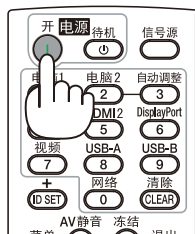




步骤 5

选择信号源。

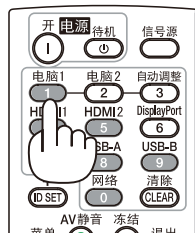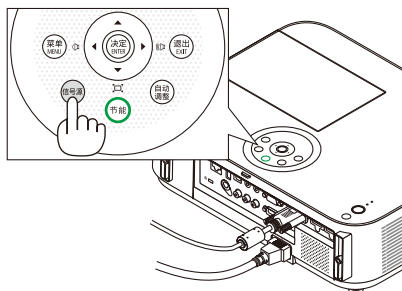

提示：

按下自动调整键自动优化电脑影像。

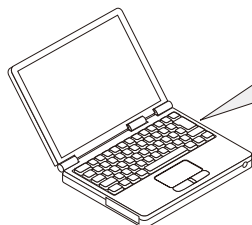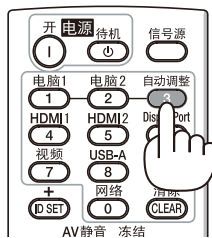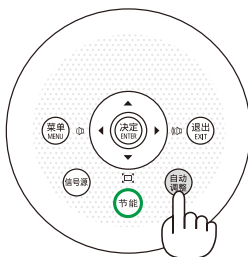



(→ 请参阅用户手册第 26, 123, 139 页)

步骤 6



调整俯仰脚

(→ 请参阅用户手册第 19 页)

[M403X+/M363X+/M323X+/M283X+/
M403W+/M363W+/M323W+/M403H+/
M323H+]

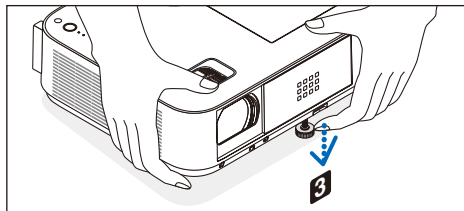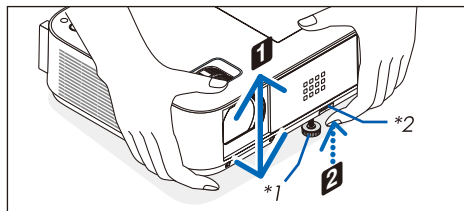

[M333XS+/M353WS+/M303WS+/
M353HS+/M323HS+/M303HS+]

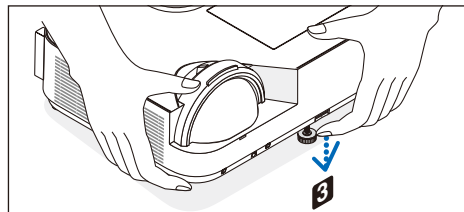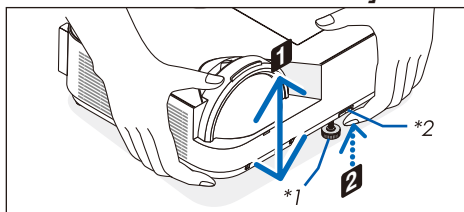


*1 可调节性俯仰脚

*2 可调节性俯仰脚调节杆

变焦

[M403X+/M363X+/M323X+/M283X+/
M403W+/M363W+/M323W+/M403H+/
M323H+]

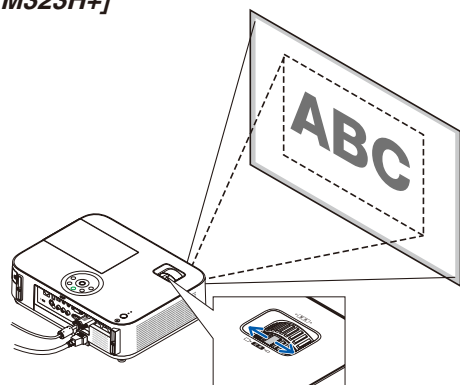


[M333XS+/M353WS+/M303WS+/
M353HS+/M323HS+/M303HS+]



(→ 请参阅用户手册第 20 页)

聚焦

[M403X+/M363X+/M323X+/M283X+/
M403W+/M363W+/M323W+/M403H+/
M323H+]

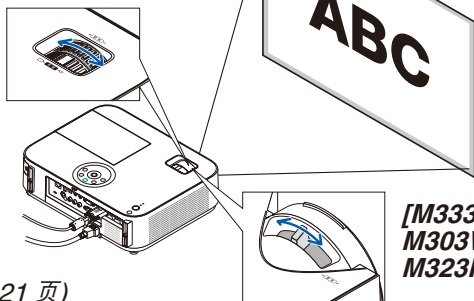


[M333XS+/M353WS+/
M303WS+/M353HS+/
M323HS+/M303HS+]

(→ 请参阅用户手册第 21 页)

出厂时，自动修正
梯形失真功能处于
开启状态。


在无菜单显示的状
态下，您也可使用
▲ 或 ▼ 键手动执
行梯形修正。

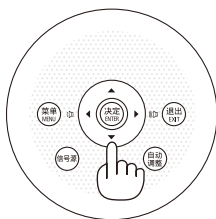

[M403X+/M363X+/M323X+/M283X+/
M403W+/M363W+/M323W+/M403H+/
M323H+]



 [M333XS+/M353WS+/M303WS+/
M353HS+/M323HS+/M303HS+]



(→ 请参阅用户手册第 22 页)

步骤



7

1. 按两次待机键。

投影机关闭以后，冷却风扇继续工作
一会 (冷却时间)。

投影机关闭和进入待机模式时，冷却
风扇停止运转。

2. 断开所有连接线。

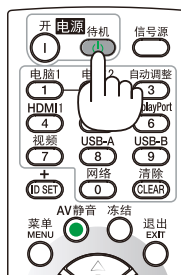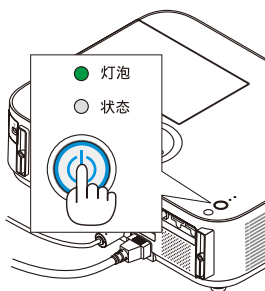

(→ 请参阅用户手册第 27 页)

