

# Firmware Update Procedure by HTTP Server

Rev.1.0

### Read This Manual Before Attempting Firmware Update

This manual describes the procedure for updating firmware of monitor by using the HTTP server function. For details on the HTTP server function, the names of the components of the monitor, the Display Menu screen operations, and so on, refer to the instruction manual.

### Precautions

- Do not turn off the main power to the monitor or remove the LAN cable during firmware update.
- For details on making a connection to the monitor from a computer through a network, using the HTTP server function of the monitor, read "LAN Control" in the instruction manual.
- As your Web browser, you must use "Microsoft Internet Explorer 10.0" or later.
   Since the monitor uses "JavaScript" and "Cookies", change your browser settings to enable the use of these functions. The way in which these settings are made depends on the version of the browser.
   So, refer to the browser Help and so on.
- Updating the firmware does not affect any data set in the screen menu of monitor.
- To apply a firmware version update over the network, DISPLAY and HTTP SERVER of NETWORK SECURITY must be enabled.

### Symbols

This manual uses the following symbols.

### Note


Describes information that must be noted.

Тір

Provides supplementary explanations and useful information.

# Preparations to Be Completed Prior to Firmware Update

**1.** Connect a LAN cable to the monitor.

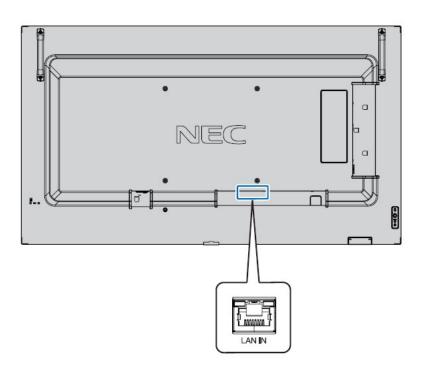

# Updating Firmware

# 1. Start the Web browser on the computer to access the home screen of the monitor.

The URL of the home screen of the monitor is "http://<IP address of the monitor>/index.html".

### NEC

HOME	НОМЕ		~						
REMOTE CONTROL									
<u>PICTURE</u> AUDIO SCHEDULE		ent and configuration web interface. n menus on the left to access additional pages.							
MULTI INPUT	MONITOR INFO	MONITOR INFORMATION							
MULTI DISPLAY DISPLAY PROTECTION	MODEL NAME	P484							
CONTROL	SERIAL	66010035NA							
ADVANCED									
SYSTEM COMPUTE MODULE	FIRMWARE VE	FIRMWARE VERSION							
NETWORK (CONTROL)	REVISION	R0.035							
NETWORK (MEDIA PLAY	ER)								
MAIL	ETHERNET (CO	NTROL)							
AMX CRESTRON	MAC ADDRESS	02:34:56:78:d3:e4							
NAME NETWORK PASSWORD	IPv4 ADDRESS	192.168.0.9							
PD LIST MEMO	SUBNET MASK	255.255.255.0	~						
UPDATE FIRMWARE									

# 2. Click "UPDATE FIRMWARE" on the menu on the left side of the screen.

1 <u>AIL INMP MX IRESTRON IAME</u> IETWORK PASSWORD	ETHERNET (CONTROL)							
	MAC ADDRESS	02:34:56:78:d3:e4						
	IPv4 ADDRESS	192.168.0.9						
EMO	SUBNET MASK	255.255.255.0						

The GO TO UPDATE FIRMWARE screen appears.

### NEC

IOME	GC	то	JPDATE FIRMW/	ARE						
EMOTE CONTROL	GO	GO TO UPDATE FIRMWARE								
CHEDULE	NO	ID	IP ADDRESS(CONTROL)	SERIES	MONITOR NAME	FIRMWARE				
IULTI INPUT ISD IULTI DISPLAY	1	1	192.168.0.110	A50						

# 3. Check the IP ADDRESS(Control)

NEC						
HOME REMOTE CONTROL	G	о то і	UPDATE FIRMW/	ARE		
PICTURE	GO	TO UPD	ATE FIRMWARE			SEARCH
AUDIO SCHEDULE	NO	ID	IP ADDRESS(CONTROL)	SERIES	MONITOR NAME	FIRMWARE
AULTI INPUT 250 AULTI DISPLAY	1	1	192.168.0.110	A50		

### Тір

 If you want to update the Firmware by daisy chain, refer to "Daisy chain Firmware update" (→ P13).

ARCH

# 4. Click the [GO TO UPDATE FIRMWARE] button.

<b>NEC</b> P484	мр					
HOME	G	ото	UPDATE FIRMW	ARE		
REMOTE CONTROL	000	70.000	ATE FIRMWARE			SE
PICTURE	00	10 000	ALE FIRMWARE			36
AUDIO	NO	ID	IP ADDRESS(CONTROL)	SERIES	MONITOR NAME	FIRMWARE
MULTI INPUT OSD	1	1	192.168.0.110	A50		
MULTI DISPLAY						

# 5. Click the [OK] button

### NEC

HOME	GO	о то ц	JPDATE F	IRMWARE		
REMOTE CONTROL			1	Web ページからのメッセージ	-	
PICTURE	GO	TO UPD/	ATE FIRMWA			SEARCH
AUDIO SCHEDULE	NO	ID	IP ADD	Are you sure?	FOR NAME	FIRMWARE
MULTI INPUT OSD	1	1	192.16	-		
MULTI DISPLAY DISPLAY PROTECTION CONTROL INPUT ADVANCED				OK キャンセル		

The UPDATE FIRMWARE screen appears.

LED blinks the green.

NEC

Upl	Upload a new firmware or ROM image into flash.										
Г				5H							
S	LECT IM	AGE	SERIES	A50	REVISION						
							_				
	NO	ID 🔺	IP ADDRESS △	SERIE	ES	FIRMWARE					
5	1 1	0	192,168.0.110	A50							

6. Click the [Browse] button under "SELECT IMAGE".

### NEC

HOME NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE SD-CARD VIEWER		UPDATE FIRMWARE Upload a new firmware or ROM image into flash.										
	SEL	ECT IM	AGE	SERIES	A50	REVISION	#R					
		NO	ID 🔺	IP ADDRESS △	SERIE	IS	FIRMWAR	l in the second s				
		1	0	192.168.0.110	A50							

# 7. Select the firmware image file to be updated and then click the [Open] button.

NEC												
HOME NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE		UPDATE FIRMWARE Upload a new firmware or ROM image into flash.										
SD-CARD VIEWER	SELECT IMAGE		C:\Users\User\Desktop\AthlonS FW\ SERIES Uploading20%	REVISION								
	□ NO □ 1	ID ▲	IP ADDRESS(MP) △ 192.168.0.110	IP ADDRESS(CONTROL) △	SERIES A50	MONITOR NAME	FIRMWARE					
	UPDATE											
				-								

#### NEC

HOME	UP	DATE FIRM	WARE									
NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE SD-CARD VIEWER	Uploa	Upload a new firmware or ROM image into flash.										
					卷缀							
	SELECT IMAGE		SER	IES	A50		REVISION	R0.0	35			
				Su	Success							
	□ NO ID ▲		ID 🔺		IP ADDRESS(C	ONTROL)	IP ADDRESS(CONTR	ol) 🛆	SERIES	MONITOR NAME	FIRMWARE	
		1	0		192.168.0.110				A50			
	LIDE	ATE										

#### Tip

• The following table lists the initial file names of the firmware image files.

Firmware	File name <sup>(Note)</sup>	Extension
FIRMWARE	FIRMWARE_A6H _R****.pac	.pac

(Note) R\*\*\*: Revision number

- The names of the firmware image files can be changed (the name can consist of up to 1024 characters, including the extension).
- Do not change the extension of a firmware image file.
- If you want to update the Firmware by daisy chain, refer to "Daisy chain Firmware update" (→ P13).


### 8. Click the [UPDATE] button.

NEC

OME	UF	UPDATE FIRMWARE										
ETWORK SETTINGS EDIA PLAYER SETTINGS PDATE FIRMWARE D-CARD VIEWER	Uploa	pload a new firmware or ROM image into flash.										
					参照							
	SEL	SELECT IMAGE			UES	A50		REVISION		R0.035		
				Success								
		NO	ID 🔺		IP ADDRESS(CC	NTROL)	IP ADDRESS(CONTRO	<sub>DL)</sub> ∆	SERIES	MONITOR NAME	FIRMWARE	
	V	1	0		192.168.0.110				A50			
	UPD	DATE										

The dialog for confirming the start of update appears.

Firmware update starts. A message appears on the screen of the monitor and the LED (5) in the figure below) blinks in green. LED change to blink after about 26 sec. After update the FW, the monitor reboots automatically.

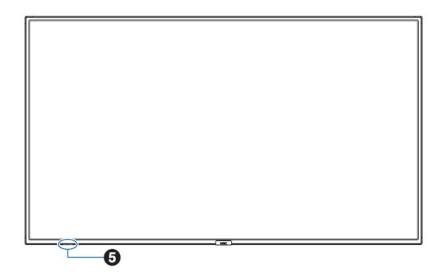

Note

Do not turn off the main power to the monitor or remove the LAN cable during firmware update.

### Tip

- Time required of update is 10 minutes.
- During update, " Updating...\*\*%." is displayed on the screen.

### NEC

ME	UPDATE FIRMWARE								
NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE	Upload a new firmware or ROM image into flash.								
-CARD VIEWER					ØI				
	SEL	ECT IM	AGE	SERIES	A50	REVISION	4 F	R0.035	
		NO		IP ADDRESS △	SER	IES	FIRMWARE		
			10 -						
		1	0	192.168.0.110	A50		Updating	.70%	

UPDATE

### Confirming the Firmware Update Results

Upon the completion of update, the green-blinking LED changes to one of the following.

- Alternately blinking in green and red (update successful), and the monitor reboots automatically, after about 15 sec.
- Blinking in red (update failure)

### Tip

When update has been successful, the screen of the monitor displays the following.

# NEC

HOME

NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE SD-CARD VIEWER

			参照	
SELECT IMAGE	SERIES	A50	REVISION	R0.035

NO	ID 🔺	IP ADDRESS $\triangle$	SERIES	FIRMWARE
1	0	192.168.0.110	A50	Success(R0.035)

UPDATE

UPDATE FIRMWARE

■ When the LED is blinking in red (update failure):

Repeat the procedure again from step 3 ( $\rightarrow$ P3) in "Updating Firmware". Moreover, refer to "If Firmware Update Fails" ( $\rightarrow$ P12).

### Tip

If update has failed, the screen of the monitor displays the following.

### NEC

HOME

NETWORK SETTINGS MEDIA PLAYER SETTINGS UPDATE FIRMWARE SD-CARD VIEWER

pioau a ne	w firmware or	ROM image into flash.					
					参照		
SELECT IMAGE		SERIES	ERIES A50 RE		N :	R0.035	
					_		
NO	ID 🔺	IP ADDRESS $\triangle$	SERIE	S	FIRMW	ARE	
						re	

UPDATE

# If Firmware Update Fails

If firmware update fails, check the following.

### ■ The monitor fails to operate even if its power is turned on.

The monitor does not run when the main power is turned on after FIRMWARE update fails. If the monitor does not run, please update via USB.

# Daisy chain Firmware Update

■ If you want to update the Firmware by daisy chain, click [Search] button.

### NEC P484 MP

OME	GO	GO TO UPDATE FIRMWARE								
REMOTE CONTROL	_									
PICTURE	GO	TO UPDA	ATE FIRMWARE			SEA				
SCHEDULE	NO	ID	IP ADDRESS(MP)	SERIES	MONITOR NAME	FIRMWARE				
<u>MULTI INPUT</u> 250 MULTI DISPLAY	1	1	192.168.0.110	A50						

IOME	GO	TO UP	DATE FIRMWARE				
EMOTE CONTROL	GO TO	UPDATE	FIRMWARE			Detected I	Monitors 4 SEARCH
UDIO	NO	ID	IP ADDRESS(CONTROL)	IP ADDRESS(CONTROL)	SERIES	MONITOR NAME	FIRMWARE
HEDULE JLTT INPUT	1	2	192.168.0.102	192.168.0.2	A50	P484	R1.001
ID ILTI DISPLAY	2	4	192.168.0.104	192.168.0.4	A50	V554	R0.063
SPLAY PROTECTION	3	3	192.168.0.103	192.168.0.3	A50	V554	
TION STEM	4	5	192.168.0.105	192.168.0.5	A50	P484	

■ If you want to change the target monitor, change the check box.

HON	IE
NET	WORK SETTINGS
MED	IA PLAYER SETTINGS
UPD	ATE FIRMWARE
SD-	CARD VIEWER

UPDATE FIRMWARE

C:\Users\User\Desktop\Athlon5 F					DS_CDT_A5_I 参照					
SELECT IMAGE			SERIES	RIES A50			F	R1.001		
			Success	Success						
_										
	NO	ID 🔺	IP ADDRES	5(CONTROL)	IP ADDRESS(CONTR	oL) △	SERIES	MONITOR NAME	FIRMWARE	
V	1	2	192.168.0.10	02	192.168.0.2		A50	P484	R1.001	
•	1	3	192.168.0.10	)3	192.168.0.3		A50	V554		
•		4	192.168.0.10	)4	192.168.0.4		A50	V554	R0.063	
		-	192.168.0.10		192.168.0.5		A50	P484		